

OVERVIEW & REQUIREMENTS

This guide walks through configuring the **Yealink T67 LTE** IP phone to register with **the mywlpbx Elite platform v7.5.0** — from installation through manual configuration and auto provisioning (TFTP, HTTP/HTTPS).

BEFORE YOU BEGIN

- **Phone model** — Confirm the exact model on the back of the phone
- **Firmware** — Version 132.86.0.35, checked via the phone's web interface
- **DHCP** — A fully configured, operational DHCP server
- **PBX version** — Release 7.5.0



Yealink T67 LTE IP phone

CHECK PHONE FIRMWARE

- 1 Browse to the phone's IP, e.g. `http://192.168.1.22`
- 2 Go to **Status** in the left navigation menu
- 3 The **Firmware Version** field displays the phone's firmware

FIND PHONE IP ADDRESS

- 1 On the phone, go to **Settings** > **General**
- 2 The IP address is displayed in the **IPv4** field

IDENTIFYING YOUR PHONE MODEL

The exact model information is printed on the back of each Yealink phone. Models can have significantly different requirements and installation procedures — confirm you have the **T67 LTE** before starting, or the setup may not complete successfully.

CHECK PBX VERSION

- 1 Log in to the mywlpbx Elite platform, navigate to **Settings** > **About**

Edition: Business, Release: 7 (251dc1c5), Running: 18.15.0-gc-c6df9197, Proxy v7 (4807ca1), API: 7

INSTALLATION

OPTION A – POWER ADAPTER

- 1 Connect the DC plug on the power adapter to the DC port on the phone, and the other end into an electrical outlet
- 2 Connect an Ethernet cable between the Internet port on the phone and a network port on your router or switch


OPTION B – POWER OVER ETHERNET (POE)

- 1 Connect an Ethernet cable between the Internet port on the phone and an available port on a PoE-compliant router or switch

NOTE: If using PoE, you do not need the AC adapter. Ensure the Ethernet cable and router/switch are PoE compliant.

MANUAL CONFIGURATION – UAD SETTINGS

- 1 Browse to the mywlpbx Elite platform, e.g. `http://192.168.1.10`, and log in with your e-mail address and password
- 2 Navigate to **Settings > UAD**
- 3 Make sure the Yealink T67 LTE UAD is enabled – click the **Edit** icon for the Yealink T67 LTE
- 4 Set **Status** = **Active**, **Auto provisioning** = **No**, **DHCP** = **Yes**
- 5 Click **Save**

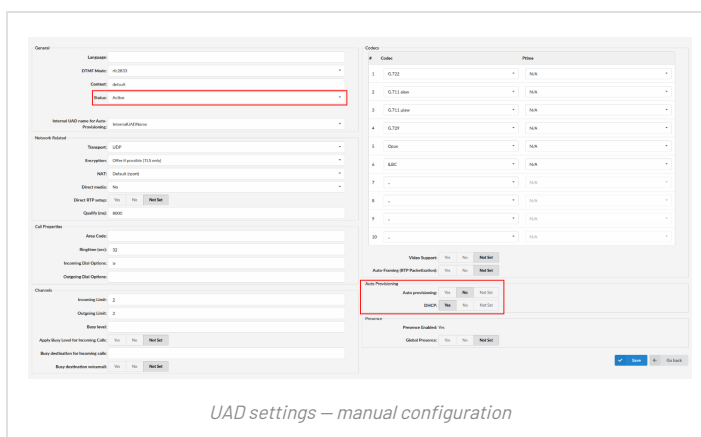

RESET TO FACTORY SETTINGS

Not required for brand-new phones – but a must for any phone previously used.

- 1 Browse to the phone's IP, e.g. `http://192.168.1.22`
- 2 Click **Settings > Upgrade**
- 3 Click **Reset** – the phone resets to factory settings and reboots automatically
- 4 Wait for the device to finish rebooting before continuing

WARNING: Do not unplug or remove power while the phone is updating firmware or configuration.

MANUAL CONFIGURATION – EXTENSION & REGISTRATION

CREATE THE EXTENSION

- 1 **Extensions > Add Extension** > **UAD** = Yealink T67 LTE, **Location** = Local or Remote > **Next step**

Local is for extensions registered on the LAN; **Remote** is for extensions registered from remote networks, WAN, Internet, etc.

REQUIRED EXTENSION FIELDS

- **Name** – e.g. John Smith
- **E-mail** – e.g. john.smith@yourdomain.com (receives all system notifications)
- **Department** – e.g. Sales

Click **Save**.

REGISTER THE PHONE

- 1 Browse to the phone's IP, e.g. `http://192.168.1.22`
- 2 Click **Account**
- 3 **Account Active** – select the **On** radio box
- 4 **Register Name** – the Extension number, e.g. `1003`
- 5 **User Name** – usually the same number as the Phone Number
- 6 **Password** – the extension Secret, e.g. `_%Z4M3*Ts9y7` (generated automatically for each new extension)
- 7 **Sip Server** – the PBX hostname or IP, e.g. `voip.yourdomain.com` or `192.168.1.10`
- 8 Click **Confirm** and wait for the device to reboot
- 9 After the reboot, dial `*123` to verify the registration.

Creating the extension

AUTO PROVISIONING

1 UAD SETTINGS

- 1 Log in to the mywlpbx Elite platform, navigate to **Settings > UAD**
- 2 Click **Edit** for the Yealink T67 LTE, set **Status** = **Active**, **Auto provisioning** = **Yes**, **DHCP** = **Yes**, click **Save**

2 CREATE THE EXTENSION

- 1 **Extensions > Add Extension** > **UAD** = Yealink T67 LTE, **Location** = Local or Remote > **Next step**

REQUIRED EXTENSION FIELDS

- **Name** — e.g. John Smith
- **E-mail** — e.g. john.smith@yourdomain.com
- **Auto Provisioning** — set to Yes
- **MAC Address** — from the back of the phone, e.g. 001565FF1536

Click **Save**.

SERVER ADDRESS FORMATS

- **HTTP** — <http://voip.yourdomain.com/prov>
- **HTTPS** — <https://voip.yourdomain.com/prov>
- **TFTP** — <tftp://voip.yourdomain.com>

HTTP is the recommended protocol type.

3 REGISTER VIA TFTP, HTTP, OR HTTPS

- 1 Browse to the phone's IP, log in, and click the **Settings** tab in the left navigation menu
- 2 Click **Auto Provision** under the Settings tab
- 3 Enter the auto-provisioning credentials into the **Username** and **Password** fields
- 4 Decide on the server type: HTTP, HTTPS, or Trivial FTP (HTTP recommended)
- 5 Enter the server address into the **Server URL** field, including protocol prefix (see formats at left)
- 6 Click **Autoprovision Now** and confirm with **OK** — provisioning runs during the reboot
- 7 Wait a couple of seconds for the configuration to update — **do not power off the phone**. The phone picks up its configuration from the PBX during the reboot. Dial ***123** to verify.

The screenshot shows the 'UAD' settings page in the mywlpbx Elite platform. The 'General' tab is active, showing fields for 'Language' (English), 'Extension Number' (15363), 'Contact' (default), and 'Status' (Active). The 'Internal UAD name for Auto Provisioning' is set to 'Internal UAD'. The 'Network Related' section shows 'Transport' (UDP) and 'Port' (5060). The 'Call Properties' section shows 'Area Code' (32), 'Area Code' (32), 'Area Code' (32), and 'Area Code' (32). The 'Channels' section shows 'Incoming Line' (2) and 'Outgoing Line' (2). The 'Auto Provisioning' section is highlighted with a red box, showing 'Auto Provisioning' (Yes), 'DHCP' (Yes), and 'MAC Address' (001565FF1536).

UAD settings — auto provisioning

The screenshot shows the 'Extension' settings page in the mywlpbx Elite platform. The 'General' tab is active, showing fields for 'Extension Number' (15363), 'Name' (John Doe), 'E-mail' (john.doe@yourdomain.com), 'Department' (Sales), and 'Status' (Active). The 'Authentication' section shows 'Username' (15363), 'Secret' (15363), 'User Password' (15363), and '2FA Max Inactivity Time' (300). The 'Auto Provisioning' section is highlighted with a red box, showing 'Auto provisioning' (Yes), 'MAC Address' (001565FF1536), and 'Server URL' (http://voip.yourdomain.com/prov).

Extension with auto provisioning

ADDITIONAL TEMPLATE & SUMMARY

ADDITIONAL CONFIGURATION TEMPLATE

To include additional UAD configuration for the Yealink T67 LTE, add fields to the **User Agent General Auto Provisioning Template** under **Settings > UAD > Yealink T67 LTE** — or add them directly to a single extension in its **UAD Auto Provisioning Template** section.



PROVISIONING SUMMARY

After successful registration via any method, dial ***123** to verify. If registration fails:

- Verify the UAD is **Active** with the correct provisioning setting
- For auto provisioning: confirm the MAC address matches
- Confirm the phone can reach the PBX on the network
- Re-check the **Server URL** and credentials

FACTORY DEFAULTS AT A GLANCE

- **Web login** — phone web credentials
- **Firmware** — 132.86.0.35
- **Registration check** — dial *123
- **Provisioning path** — /prov
- **Recommended protocol** — HTTP